



## REPLACEMENT BATTERY GUIDE FOR ELK WIRELESS SENSORS

<b>Two-Way Wireless</b>			
<b>Sensor Part#</b>	<b>Battery Type</b>	<b>Voltage</b>	<b>Qty</b>
ELK-6010	CR2032 Lithium	3V	1
ELK-6011	CR2032 Lithium	3V	1
ELK-6020	½ AA Lithium	3.6V	1
ELK-6020BR	½ AA Lithium	3.6V	1
ELK-6021	CR2032 Lithium	3V	1
ELK-6021BR	CR2032 Lithium	3V	1
ELK-6022	CR123A Lithium	3V	1
ELK-6023	½ AA Lithium	3.6V	1
ELK-6023BR	½ AA Lithium	3.6V	1
ELK-6030	CR123A Lithium	3V	2
ELK-6030P	CR123A Lithium	3V	2
ELK-6032	CR123A Lithium	3V	2
ELK-6040	CR123A Lithium	3V	1
ELK-6050	CR123A Lithium	3V	2
ELK-6051	AAA Alkaline	1.5V	2
ELK-6052	CR123A Lithium	3V	2
ELK-6053	CR123A Lithium	3V	2

<b>319 Series Wireless</b>			
<b>Sensor Part#</b>	<b>Battery Type</b>	<b>Voltage</b>	<b>Qty</b>
ELK-319DG	CR2032 Lithium	3V	2
ELK-319DR	CR2 Lithium	3V	1
ELK-319DWM	CR2032 Lithium	3V	2
ELK-319GB	CR123A Lithium	3V	2
ELK-319HRR	CR123A Lithium	3V	1
ELK-319KF1	CR2032 Lithium	3V	1
ELK-319KF4	CR2032 Lithium	3V	1
ELK-319PB1	CR2450Lithium	3V	1
ELK-319PIRC	CR2032 Lithium	3V	2
ELK-319PIRW	CR123A Lithium	3V	1
ELK-319WS	CR2032 Lithium	3V	2